


NOTES:

1. FOR SEWERS SMALLER THAN 18" DIAMETER, DISCONNECT SEWER AS SHOWN, INSERT MECHANICAL PLUGS, PLACE CONCRETE, PARGING AND COAT WITH TWO COATS OF ASPHALT-BASED COATING.
2. FOR SEWER 18" AND LARGER DIAMETER SAME AS 15" AND SMALLER EXCEPT MASONRY BULKHEAD MAY BE SUBSTITUTED FOR MECHANICAL PLUG.
3. RESHAPE AND FILL EXISTING CHANNEL AS NECESSARY TO PROVIDE SMOOTH CONTOUR BETWEEN INCOMING AND OUTGOING PIPES.
4. FILL ENTIRE LENGTH OF SEWER TO BE ABANDON WITH FLOWABLE FILL OR REMOVE ENTIRE LENGTH OF SEWER.

EXISTING MANHOLE TO REMAIN.

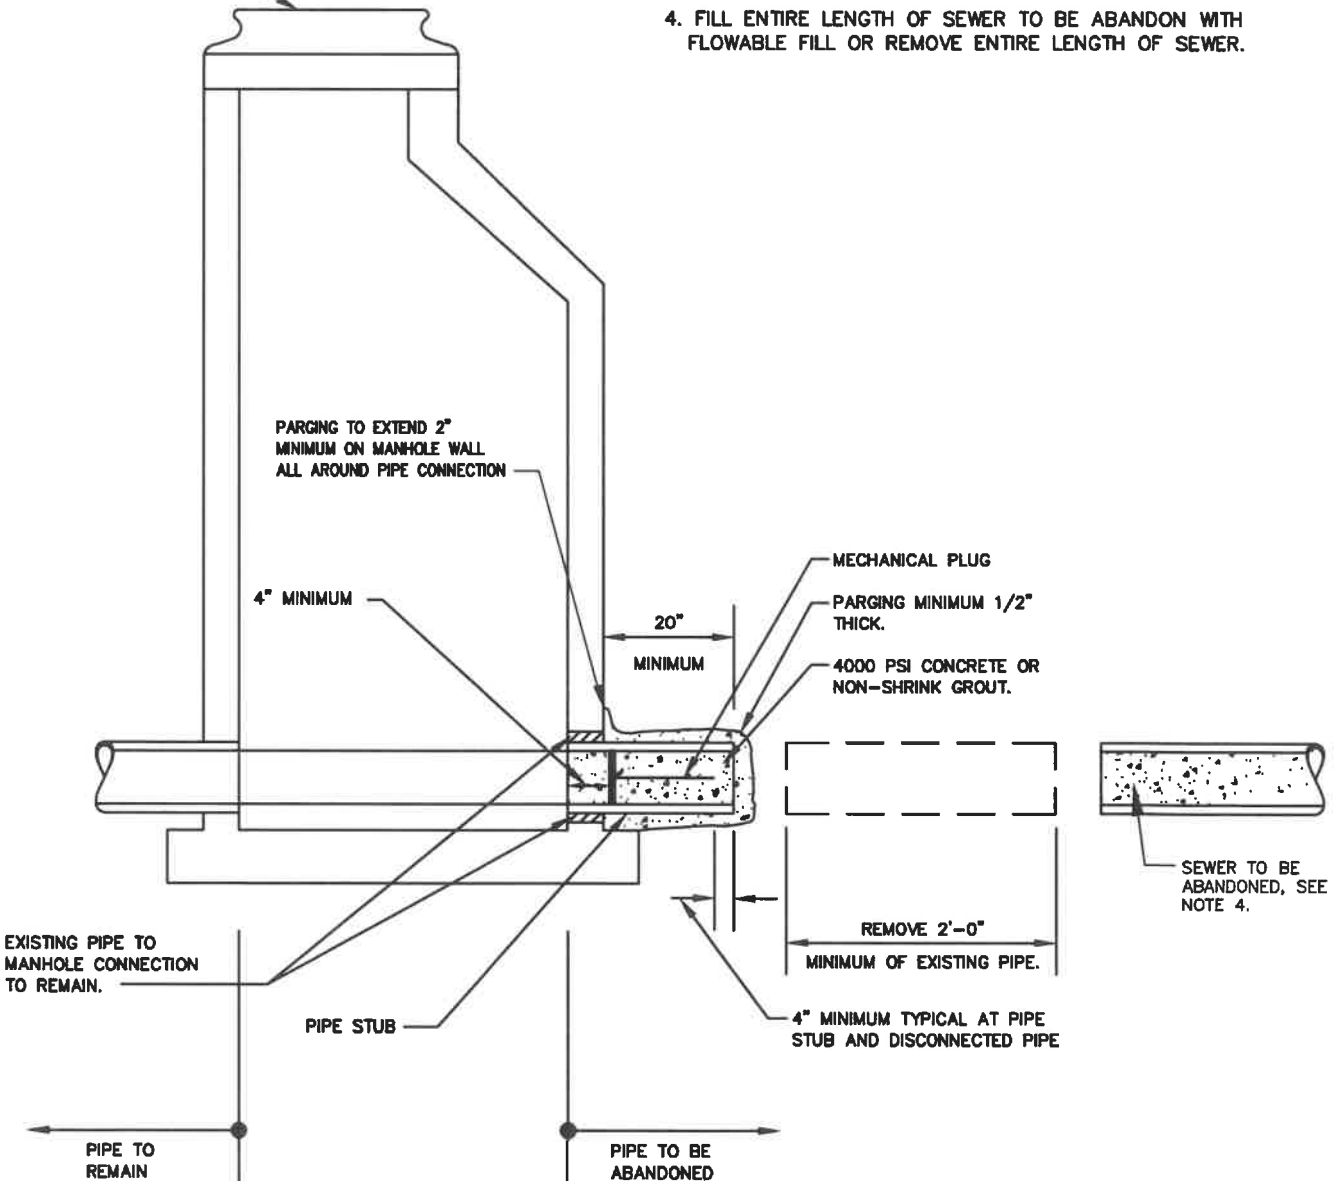

WASHINGTON
SUBURBAN
SANITARY
COMMISSION

APPROVED: 2-7-21

M. W. Hanner
Chief Engineer

STANDARD DETAIL

ABANDONMENT OF PIPE
AT MANHOLE

S
3.5